

**M-GAME**

**MACHENIKE**

**GAMEPAD**

**G1系列**

USER MANUAL 使用说明书

WARRANTY CARD 保修卡

\*Read manual before use. Keep for reference\*

\*使用本产品前请仔细阅读说明书，妥善保存以备参考\*

**功能组合键操作指南**

功能	组合键	备注
震动强度调整	[FN]+[十字键↑][L]	/
摇杆方向微调	左摇杆[FN]+[L3]/右摇杆[FN]+[R3]	切换成功震动提示
快捷扳机功能	左扳机[FN]+[LT]/右扳机[FN]+[RT]	/
ABXY扳机功能	FN+A/长按3s	切换成功震动提示
手柄扳机切换 (键帽输入/Output/DPad)	[L]+键/[+]键/长按3s	仅2.4G/有线连接支持

\*使用组合键时，请务必按照上述的按键顺序进行操作，否则会出现无法切换的问题

**电量说明**

- 查看当前电量：组合键[BACK]+[TURBO]同时按可显示当前电量
- 电量指示：剩余电量指示灯常亮指示，见右图：
- 充电提示：充电时，4颗指示灯常亮；充满电时，4颗指示灯灭。

**注意！请勿用超过5V=1A的电源给手柄充电，以免造成机器损坏。**

**TURBO功能**

支持TURBO的按键：A/B/X/Y/LB/LT/RB/RT

手动TURBO功能：按下TURBO+键可开启手动TURBO功能，需要手动按住A键才会触发；

自动TURBO功能：开启手动TURBO功能之后，再次按下TURBO+键，此时从键开始自动给TURBO功能，再次按下TURBO+A，则为关闭该功能。

\*已开启TURBO功能的按键，按下该键，指示灯会持续闪烁

**更多自定义功能可在Keylinker中进行设置**

**APP下载——安卓/鸿蒙/iOS**

在机械师官网中下载APP, 以获取最新更新。  
地址: <https://machenike.com/shouying/download>

使用浏览器扫描右侧二维码进行下载界面；  
鸿蒙系统请扫描右侧安卓版即可。

**连接步骤**

- 在手机正确安装Keylinker软件后, 首次启动时, 弹出的相关权限申请需按提示确认;
- 任意模式启动手柄, 可在Keylinker软件主页中搜到"G1\_APP"
- 单击"G1\_APP"连接并进入自定义界面;

**注意：“此功能无需手柄蓝牙连接手机, 按上述操作打开Keylinker即可更改手柄设置。”**

**重置手柄**

当手柄在操作过程中或接入时, 出现无响应或无法识别工作模式时, 可将手柄的USB连接线提出并重新连接, 亦可使用手动模式选择进入相应的工作模式。如果问题仍不能解决, 请长按[HOME]键10秒或检查操作系统和设备与本手柄的兼容性, 若仍无法解决, 请联系经销商客服。

**PACKING CONTENTS**

**Please check and confirm the accessories**

1 x Controller  
1 x User Manual, Certificate of Compliance  
1 x USB Data Cable  
1 x 2.4G Receiver(Optional)

**BUTTON LAYOUT**

**CONNECTION**

**Before establishing a wireless connection, please ensure to switch to wireless mode using the combination keys.**

**Modes**

Modes	Combination Keys	Device Names
2.4G Mode	[B]+[HOME]	Connect to the dongle-connected device
PC/Mobile Mode	[X]+[HOME]	Xbox Wireless Controller
Switch Mode	[Y]+[HOME]	Pro Controller
Android Mode	[A]+[HOME]	MACHENIKE G1

**Wireless Connection:** Hold down the pairing button until the indicator light flashes rapidly. The controller will enter pairing mode, allowing you to connect to the corresponding device.

**Wired Connection:** With the controller powered off, directly connect the device and the controller using the included data cable to use.

**Controller Sleep/Reconnect:** In wireless mode (Bluetooth/2.4G), if there's no activity for 10 minutes, the controller will automatically power off. Press the HOME button to wake up the controller, and it will automatically reconnect to the previous device.

**Turn off the controller:** When using wireless connection (Bluetooth/2.4G), press and hold the HOME button for more than 5 seconds to shut down the controller.

**COMBINATION BUTTONS**

Function	Combination	Key-Note
Vibration Intensity Adjustment	[FN] + D-pad [↑][↓]	/
Joystick Mode Switch	Left Joystick: FN + L3 Right Joystick: FN + R3	Successful switch indicated by vibration
Quick Trigger Function	Left Trigger: FN + LT Right Trigger: FN + RT	/
ABXY Layout Switch	Hold FN + A for 3 seconds	Successful switch indicated by vibration
Controller Mode Switch (Input/Output/Switch)	Holding the [-] + [+] buttons for 3 seconds	Successful switch indicated by vibration

\*When using combination keys, it is essential to follow the specified button sequence mentioned above; otherwise, switching may not work correctly.

**BATTERY INFORMATION**

- Check Current Battery Level: Press [BACK] + [TURBO] simultaneously to display the current battery level.
- Battery Indicator: The remaining battery level is indicated by the solid illumination of the battery level lights, as shown in the image below:
- Charging Indicator: During charging, all four battery level lights will remain on. When fully charged, all four lights will turn off.

**Attention! Do not use a power source exceeding 5V=1A to charge the controller to avoid damage to the device.**

**TURBO FUNCTION**

**TURBO Function:** Supported TURBO buttons: A/B/X/Y/LB/LT/RB/RT  
Manual TURBO Function: When the manual TURBO function is enabled for the A button, you need to manually hold down the A button to activate it.  
**To enable the TURBO function:**  
1. Press and hold TURBO+A and then release it. At this point, the A button activates the manual continuous fire function.  
2. Press TURBO+A again. Now, the A button activates the automatic continuous fire function.  
3. Press FN+A once more to disable the continuous fire function.

**Note:** FN+A/B/X/Y/LB/LT/RB/RT can be used to enable the TURBO function for the corresponding buttons. When buttons are in continuous fire mode, the H-one button indicator light will flash in synchronization.

**For more customized functions, settings can be adjusted in the Keylinker app.**

**APP Download for Android/HarmonyOS/iOS:**

- Download the app and related firmware updates from the Machenike official website: <https://global.machenike.com/>
- Or scan the QR code on the right using your browser to access the download page.
- For HarmonyOS, please download the Android version of the app.

**Connection Steps:**

- After correctly installing the Keylinker software on your phone, confirm the relevant permissions prompts that appear when you first start the app.
- Start the controller in any mode, and you can find "G1\_APP" in the Keylinker app's main page.
- Click "G1\_APP" to connect and enter the customization interface.

**Note:** \*This function does not require the controller to connect to the mobile phone via Bluetooth. Follow the above operations to open Keylinker to change the controller settings.

**RESET**

When the controller is unresponsive or unable to identify the working mode during operation or access, you can pull out the USB cable of the controller and reconnect it, or use the manual mode to select into the corresponding working mode. If the problem still can not be solved, please long press the [HOME] button for 10 seconds or check the compatibility of the operating system and equipment with the controller, if still can not be solved, please contact the dealer customer service.

**Copyright Information**

PlayStation is a registered trademark of Sony Interactive Entertainment (SIE).  
XBOX/Windows is a registered trademark of Microsoft Corporation.  
Android is a trademark of Google Inc.  
Nintendo Switch is a registered trademark of Nintendo Co.  
Macos is a registered trademark of Apple Inc. in the United States or other countries.

Other system and product names that appear in this document are generally registered trademarks or trademarks of the respective developer companies. Please note that the "logo" and "logos" do not appear in this document.

Please consult customer service or the brand's website for updates to the product firmware without notice.  
Machenike Official Website: <https://global.machenike.com/>

**SPECIFICATIONS**

ITEM	DATA
Input Power	5.0V=300mA
Battery Capacity	3.7V / 600mAh
Use Distance Range	<=10M

**Safety Warning**

Please read and strictly follow the safety instructions below before using this product to ensure optimal performance, safe operation, and to prevent hazards or unlawful behavior:

- Use this product within an ambient temperature range of 0°C to 35°C. The recommended storage temperature range is -10°C to 40°C. Operating or storing the device outside these limits may result in malfunction.
- This product and its accessories may contain small components. Keep them out of the reach of children to prevent accidental injury, choking, or other hazards.
- Avoid exposing the product and its accessories to rain, liquids, or moisture, as this may result in fire or electric shock.
- Keep the product and the battery or battery pack, if applicable, away from open flames, high-temperature environments, and direct sunlight to prevent potential damage.
- Dispose of the product and its accessories in accordance with local regulations. Do not discard them as household waste. Improper disposal, especially of battery or battery pack, may result in explosion.
- Do not disassemble, modify, or repair the product or its accessories (including the replacement of the built-in battery or battery pack, if applicable) without professional authorization. Improper handling may result in device damage or personal injury and will void the warranty.
- If the product supports power supply or charging via an external adapter, use only certified adapters that comply with applicable national or regional safety standards.

**Safety Warning**

- If the product is equipped with a battery or battery pack, pay special attention to the following precautions:
  - Do not inclinate or expose the battery or battery pack to heat, as this may cause an explosion.
  - Do not disassemble, drop, crush, or modify the battery or battery pack to avoid mechanical damage that could result in explosion.
  - Do not insert foreign objects into, or puncture, the battery or battery pack or its compartment.
  - Do not immerse the battery or battery pack in water or any other liquid. Do not use the product if it has been exposed to moisture.
  - Avoid external impact or pressure on the battery or battery pack to prevent leakage, overheating, fire, or explosion.
  - Do not use or store the battery or battery pack outside the recommended temperature range, as this may lead to explosion or leakage of flammable substances.
  - The battery or battery pack may leak or explode when subjected to extremely low air pressure.
  - If the battery or battery pack is replaceable, follow the instructions in the user manual strictly. Improper replacement may pose an explosion hazard.
  - Only use the same or an equivalent type of battery or battery pack as specified. Using the wrong type may compromise the product's safety mechanisms.

**产品清单**

请检查并确认附件

1 x 手柄  
1 x 使用说明书、保修卡、合格证  
1 x USB充电数据线  
1 x 接收器 (选配)

**按键布局**

**基本连接说明**

在无线连接之前请先通过组合键切换到对应的设备模式

**连接模式**

连接模式	组合键	设备名称
2.4G模式	[B]+[HOME]	根据连接的设备自动匹配
PC/OS模式	[X]+[HOME]	Xbox Wireless Controller
Switch模式	[Y]+[HOME]	Pro Controller
Android模式	[A]+[HOME]	MACHENIKE G1

**无线连接:** 长按对应组合键直到指示灯闪烁, 则手柄进入配对状态, 连接上对应的设备名称即可。

**有线连接:** 在手柄关机情况下, 通过附赠的数据线直接连接设备和手柄, 即可使用。

**手柄休眠/回连:** 无线连接使用 (蓝牙/2.4G), 10分钟不操作手柄会自动关机休眠; 下次连接设备, 通过短按HOME键可唤醒手柄, 并自动回连设备。

**手柄关机:** 无线连接使用 (蓝牙/2.4G), 长按HOME键5s以上手柄关机。

**更多自定义功能可在Keylinker中进行设置**

**APP下载——安卓/鸿蒙/iOS**

在机械师官网中下载APP, 以获取最新更新。  
地址: <https://machenike.com/shouying/download>

使用浏览器扫描右侧二维码进行下载界面；  
鸿蒙系统请扫描右侧安卓版即可。

**连接步骤**

- 在手机正确安装Keylinker软件后, 首次启动时, 弹出的相关权限申请需按提示确认;
- 任意模式启动手柄, 可在Keylinker软件主页中搜到"G1\_APP"
- 单击"G1\_APP"连接并进入自定义界面;

**注意：“此功能无需手柄蓝牙连接手机, 按上述操作打开Keylinker即可更改手柄设置。”**

**重置手柄**

当手柄在操作过程中或接入时, 出现无响应或无法识别工作模式时, 可将手柄的USB连接线提出并重新连接, 亦可使用手动模式选择进入相应的工作模式。如果问题仍不能解决, 请长按[HOME]键10秒或检查操作系统和设备与本手柄的兼容性, 若仍无法解决, 请联系经销商客服。

**版权等信息**

XBOX/Windows 是美国微软公司 (Microsoft Corporation) 的注册商标。  
Android 是 Google Inc. 的商标。  
Nintendo Switch 是任天堂株式会社 (任天堂) 的注册商标。  
除在本文档中的其他名称和产号通常常开发商公司的注册商标。  
请留意, 本文档中可能会出现“标志”和“标志”。

当产品固件有更新时, 请访问经销商或前往品牌官网查看, 请不另行通知。

**机械师官网:** <https://www.machenike.com>

**规格**

项目	参考值
执行标准	Q/0212LSKJ0910-2019
输入电源	5.0V=300mA
电池容量	3.7V / 600mAh
使用距离范围	<=10M

**安全警告**

在使用本产品前, 请仔细阅读并遵守以下注意事项, 以确保产品性能、安全使用并避免危险或非法行为:

- 请在0°C至35°C环境温度下使用本产品, 存放温度范围为-10°C至40°C。超出范围可能会导致设备故障。
- 本产品及其配件可能含有小部件, 应置于儿童接触不到的地方, 以防误伤、误吞或窒息或其他危险。
- 避免产品及其配件接触明火、液体或受压, 以免引发火灾或触电风险。
- 避免火灾、高温环境和阳光直射, 避免对产品造成损害或造成火灾 (如适用)。
- 请根据当地法规回收处理产品和配件, 不得作为生活垃圾丢弃。若产品含有电池, 错误处理可能导致环境污染。
- 禁止自行拆卸、更改或修理产品及配件 (包括更换内置电池, 如适用), 否则可能导致设备损坏或人身伤害, 且不在保修范围内。
- 本产品支持电源适配器供电充电, 请选用获得CCC认证且符合标准的适配器。
- 若产品配有电池或电池组, 请特别注意以下事项:
  - 禁止投入火中或浸泡, 以防爆炸。
  - 禁止拆解、跌落、挤压或改装电池, 防止机械损伤引发爆炸。
  - 禁止异物插入或穿刺电池或其零部件。
  - 禁止浸入水或潮湿液体, 如进水请立即停用。
  - 避免电池遭受外力撞击或挤压, 以防漏液、过热、起火或爆炸。
  - 不得在超出指定温度范围的环境中存储或存放, 以防发生爆炸或泄漏可燃物质。
  - 电池在低温环境下可能发生泄漏或爆炸。
  - 若电池可更换, 请严格按照说明操作, 不当更换可能存在爆炸风险。
  - 仅使用相同型号或等效型号电池进行更换, 使用错误型号可能导致安全预防失效。

**低功耗短距离设备声明**

本产品及配件中的接收器具备《中华人民共和国无线电管理条例》规定的低功耗短距离无线电发射能力, 根据《中华人民共和国工业和信息化部公告2019年第52号》要求, 声明如下:

- 符合“低功耗短距离无线电发射设备目录及技术要求”通用规范功能类设备的技术要求, 采用内置天线, 控制、开关等相关信息请参考本使用手册接收器连接设备的部分说明。
- 不得擅自改变使用频率或使用条件, 扩大发射频率范围, 加大发射功率 (包括经外电路调制功率放大), 不得随意更改发射线。
- 不得对其他合法的无线电电台 (站) 产生有害干扰, 也不得提出免受有害干扰保护。
- 应遵守发射功率限值、行业、科学及医疗 (ISM) 应用设备的干扰或其他合法无线电电台 (站) 干扰。
- 如对其他合法的无线电电台 (站) 产生有害干扰时, 应立即停止使用, 并采取消除干扰后方可继续使用。
- 在航空器和依据法律法规、国家有关规定、标准对应的射电天文台、气象雷达站、卫星地球站 (含测控、测距、接收、导航站) 等军民用无线电电台 (站)、机场等的电磁环境保护区域内使用低功耗设备, 应当遵守电磁环境保护及航行安全管理部门的规定。
- 禁止在以机场跑道中心点为圆心、半径5000米的区域内使用各类模型遥控器。
- 低功耗部分使用时温度和电压的环境条件与产品主体相同。

**FCC Caution:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

**产品中有毒物质的名称及含有信息表**

部件名称	印刷电路板组件	电池组件	马达组件
铝 (Al)	X	○	○
汞 (Hg)	○	○	○
镉 (Cd)	○	○	○
六价铬 (Cr(VI))	○	○	○
多溴联苯 (PBBs)	○	○	○
多溴二苯醚 (PBDEs)	○	○	○
邻苯二甲酸二丁酯 (DBP)	○	○	○
邻苯二甲酸二己酯 (DEHP)	○	○	○
邻苯二甲酸二(2-乙基)己酯 (DEHP)	○	○	○

本表格依据SJ/T 11364-2024的规定编制。

注1: “X”表示该有害物质在该部件所有均质材料中的含量均满足有害物质限制使用标准的要求。  
“○”表示该有害物质在该部件的所有材料中的含量均满足有害物质限制使用标准的要求。  
注2: 上表列出的部件, 表明其有害物质含量均满足有害物质限制使用标准的要求。  
注3: 该电子产品含有某些有害物质, 若环保使用期限内可以放心使用, 超过环保使用期限之后则应进入回收循环系统。

**《废弃电器电子产品回收处理管理条例》**

我公司倡导环保和资源的消费理念, 建议有该产品的用户在不需要此产品时, 应遵守国家废弃电器电子产品回收处理及污染防治法规, 将产品交给国家认可的回收处理资质的厂商进行回收处理, 降低资源浪费, 保护地球自然环境。

**MACHENIKE产品保修承诺**

- 在用户按本技术使用说明书正确使用该产品的前提下, 本产品自购买之日起一年内免费保修。保修服务方式为返厂维修, 按方式请用户包装上售后二维码进行报修。
- 我方因下列使用者个人的原因而造成的故障将不提供免费保修服务:
  - 擅自拆装、改装该产品而造成的故障;
  - 在使用、搬运的过程中不慎摔打、跌落、浸液、供电规格不符而造成的故障;
  - 因缺乏合理的保养而造成的故障;
  - 没有按使用说明书正确指示进行操作;
  - 第三方厂品、服务或行为导致的故障或损坏等等。
- 在要求提供免费保修服务时, 您必须提供清晰、完整和准确的销售发票和保修卡, 购买产品时, 可要求销售商提供上述销售发票和保修卡。
- 保修范围外的维修服务, 将按规定收费。

**保修卡**

尊敬的用户:  
感谢您选购本公司产品, 我公司将按照《中华人民共和国消费者权益保护法》和国家市场监督管理总局、国家工商行政管理总局、财政部关于《部分商品修理更换退货责任规定》的有关规定, 为您提供保修服务, 请认真填写此卡并妥善保存, 以便日后凭此卡维修。

客户姓名: \_\_\_\_\_ 电子邮件: \_\_\_\_\_  
联系电话: \_\_\_\_\_ 邮政编码: \_\_\_\_\_  
通信地址: \_\_\_\_\_ 产品型号: \_\_\_\_\_  
产品名称: \_\_\_\_\_  
购机日期: \_\_\_\_\_  
购机渠道: \_\_\_\_\_  
机身编号: \_\_\_\_\_

**产品性能故障表**

送修日期	性能故障描述	工程师签字	完成日期

**备注:**

- 请妥善保管此卡, 保修时需出示此卡及购买凭证。
- 产品自购买之日起, 凭购买凭证整机免费保修1年。
- 下列情况不属于免费服务范围, 但可实行收费维修、终身服务:
  - 不能出示保修说明及发票;
  - 恶意涂改;
  - 意外因素或使用不当造成损坏;
  - 未经我司许可, 自行修理造成的损坏;
  - 超过三包有效期, 经修复仍可继续使用;

**合格证**

QUALIFIED CERTIFICATE

QC PASS

**检验**

MACHENIKE CERTIFIED

**合格证书**

合格证

QC PASS

**检验**

MACHENIKE CERTIFIED

**合格证书**

合格证

QC PASS

**检验**

MACHENIKE CERTIFIED

**合格证书**

合格证

QC PASS

**检验**

MACHENIKE CERTIFIED