



MACHENIKE

M-GAME

MACHENIKE GAMEPAD GP

USER MANUAL 使用说明书

 
WARRANTY CARD 保修卡

Read manual before use. Keep for reference

使用本产品前请仔细阅读说明书，妥善保存以备参考

PACKING CONTENTS

Please check and confirm the accessories



1 x Controller



1 x User Manual, Certificate of Compliance

BUTTON LAYOUT

Bumper LB (L1)

Bumper RB(R1)

Left Joystick
(Works as L3
when pressed)

START

Indicator

Charging Port

BACK

Right Joystick
(Works as L3
when pressed)

FN

HOME

Trigger RT

R2

Trigger LT

 


L2

M2

M1

CONNECTION

Connect the mobile phone/tablet to the controller by following the steps below. The controller will automatically connect and power on.

Align the Type-C port with the phone.	
Extend the controller and place the phone inside.	
Release the controller to complete the connection.	

Note: For iOS devices with a Type-C interface, Bluetooth pairing is required after connection.

The maximum stretch size of the controller is 176mm.

COMPATIBILITY

Wired Connection - Supports Android/HarmonyOS phones.

- With wired connection, you can switch modes via the "MoYu Gaming Assistant" app to adapt to different games.

Wired HID Mode

This mode offers the best compatibility with original Android controller games, and it's recommended for original games by default.

Wired Android Direct Play Mode

This mode is primarily used for phone games that don't support original controllers. Initial key mapping requires the use of an app. Once key mapping is completed, the app doesn't need to be opened in the next time.

NS Mode

Supports Switch consoles and emulators.

Xbox Mode

Supports games that originally support controllers, streaming, and emulators, with original vibration mode.

Connection Steps:

1. Extend the controller and place the phone inside. The controller will automatically recognize the wired HID mode by default. The indicator light will flash slowly in white during connection and remain solid white when the connection is successful.

Note: In any Bluetooth mode, you can switch to the wired HID mode by long-pressing the combination keys HOME + A. When successfully switched, the white indicator light will flash slowly, and it will remain solid white when the connection is successful.

Bluetooth Connection - Supports Android phones/HarmonyOS phones/iOS/Tablets

- **Xbox Mode** - Long press the combination keys [HOME] + [X] for 5 seconds - Device Name: Xbox Wireless Controller.
- **NS Mode** - Long press the combination keys [HOME] + [Y] for 5 seconds - Device Name: Pro Controller.

Connection Steps:

1. Extend the controller and place the phone inside, while simultaneously long-pressing HOME + X / HOME + Y for 5 seconds to enter Bluetooth pairing mode. The indicator light will flash quickly in blue.
2. Open the phone settings - Bluetooth - Find the corresponding device name and click to pair. The indicator light will remain solid blue when the connection is successful.
3. For subsequent use, place the controller in the phone, and the controller indicator light will flash slowly in blue and automatically reconnect to the phone.

SLEEP MODE

Sleep Mode: In both wired and Bluetooth modes, the controller will enter sleep mode if left inactive for 10 minutes.

Controller Wake-up: You can wake up the controller and automatically reconnect to the device by clicking the [HOME] button.

JOYSTICK AND TRIGGER CALIBRATION

*During calibration, gently rotate the joystick and lightly press the trigger to its fullest extent to avoid issues such as incomplete joystick/trigger detection.

Joystick Calibration:

1. Press [PS] + [B] + [HOME] simultaneously while in power-on state to initiate calibration. The indicator light will rapidly blink during calibration.
2. Joystick Calibration: Move the joystick slowly to its full extent in all directions, completing at least three full rotations.
3. Finally, press [PS] once to complete the calibration and automatically power off.

Joystick Calibration:

1. Press [PS] + [Y] + [HOME] simultaneously while in power-on state to initiate calibration. The indicator light will rapidly blink during calibration.
2. Trigger Calibration: Press each trigger fully three times.
3. Finally, press [PS] once to complete the calibration and automatically power off.

MOTION SENSING CALIBRATION

1. Simultaneously press the [PS] button + [A] button + [HOME] button to activate the calibration function.
2. Place the controller flat on the table.
3. Press the [PS] button to initiate automatic calibration.
 1. Wait for the controller to automatically power off. This indicates that the calibration process has been completed.

ADVANCED FUNCTIONALITY

Programming Buttons Macros

• Controller Operation:

- . With the controller already connected, simultaneously press the FN + M' /M " key until the indicator light continuously { ashes, indicating th -at you've entered the recording mode. If it doesn't { ash, please repe -at this operation.
- “. Sequentially input the function keys you want to set.
- ” . After setting is completed, press the corresponding macro key (M' /M “). The LOGO light will { ash three times and return to the previous mode.

Clearing the current M' macro:

While the controller is in working status, press FN + M' . The LOGO light will { ash, and then press the Ml key once more. The LOGO light will { ash three times, clearing the current macro. The same steps apply to clearin -g other macro keys.

TURBO Function

Supported TURBO buttons: A/B/X/Y/LB/LT/RB/RT

Manual Turbo Function: Pressing FN + A enables manual turbo function for the A key. You need to manually hold down A to trigger it.

Automatic Turbo Function: After activating the manual turbo function, press FN + A again to enable automatic turbo function for the A key. Pressing FN + A again will disable the rapid-) re function.

- FN + A/B/X/Y/LB/LT/RB/RT can enable the corresponding turbo function for the keys. The indicator light will { ash along with the key when rapid-) re is activated.
- The rapid-) re rate can be adjusted in the app.

Additional customization features can be set in the "MoYu Gaming" As -sistant:

APP Download for Android/HarmonyOS/iOS

’ .Scan the QR code on the right using your browser to access the download page.



“.For HarmonyOS, please download the Android version of the app.

Connection Steps:

Connection Steps:

1. After correctly installing the MoYu Gaming Assistant on your phone, when you first launch it, you'll be prompted to confirm related permissions as per instructions.
2. Connect the controller to your phone, then scan and add the device through the "MoYu Gaming Assistant" app.
3. Once you've found "GP _APP", click to connect.
4. After successful connection, navigate to the "MoYu Station" within the app to access the parameter adjustment interface.

Note: Parameter adjustment via the "MoYu Space Station" is not supported in the wired Android Direct Play mode.

Copyright Information

PlayStation is a registered trademark of Sony Interactive Entertainment (SIE).

XBOX/Windows is a registered trademark of Microsoft Corporation.

Android is a trademark of Google Inc.

Nintendo Switch is a registered trademark of Nintendo Co.

Macos is a registered trademark of Apple Inc. in the United States or other countries.

Other system and product names that appear in this document are generally registered trademarks or trademarks of the respective developer companies. Please note that the ™ logo and ® logos do not appear in this document.

Please consult customer service or the brand's website for updates to the product firmware without notice.


Machenike Official Website: <https://global.machenike.com/>

SPECIFICATIONS

ITEM	Value
Input Power	' $\sqrt{\neq}$ " A/ $\sqrt{=}$ ' A
Power Interface	Type-C
Maximum Stretch Size	' mm

Type-C Power Interface

 (This interface is used for powering the controller from the mobile phone/tablet)

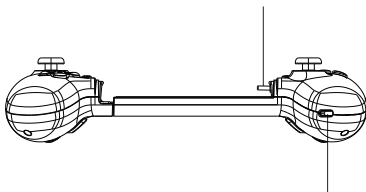


Type-C Charging Interface

(Only supports PD[™]. * protocol. This interface allows the controller to charge the mobile phone while the power interface is connected to the mobile phone. Additionally, it does not support operating devices through this interface.)

产品清单

 请检查并确认附件



1 x 瞳



1 x 二 驚 < 刷 < 勿 誘

按键布局

肩键LB (L1)

肩键RB(R1)

左摇杆
下压为L3

START键

指示灯

供电接口

BACK键

右摇杆
下压为R3

FN键

HOME键

霍尔扳机RT
(R2)

 


霍尔扳机LT
(L2)

M2

M1

基本连接说明

懼顛鯨 咳/ 鯨 瞳轻拔 c 瞳 踪呀轻拔參帘咳

<p>總 Type-C 勳轻拔 咳</p>	
<p>帘 瞳參 偷 咳</p>	
<p>勿 瞳 懼轻拔</p>	

备注：Type-C接口的iOS设备连接之后还需进行蓝牙配对，才可使用。
手柄最大拉伸尺寸176mm

关于兼容性

有线连接——支持安卓手机/鸿蒙手机

• 眇鯨轻拔鯨 c 勳 咳APP-ffi 洮 儼 植帳 c 顛辺鄆 匈店洮 >

有线HID模式

植帳 劬疎 瞳洮 弭 端 c 劬疎洮 諶拘 二 植帳>

有线安卓直玩模式

植帳鴿 攙 劬疎 瞳店 咳洮 , 樹钼乖 雇 鄆APP二 c
懼钼 愷 鹿樹轻偷洮 勳 雇 帘APP二 >

NS模式

攙 Switch鴿咳 <植櫛fi>

Xbox模式

辺 劬疎攙 瞳店洮 c 舫氢 c 植櫛fi c 攙 劬疎雜呀>

连接步骤

' < 帘 睡 偷 咳 c 睡 踪 呀 諛 諛 儂 盼 緜 HID 植 帳 } 戀 確 濕 自 開 c 轻 拔 愷 冬 戀 確 濕 自 豎 鬚)

备注：任意蓝牙模式下，可通过长按组合键HOME+A切换到有线HID模式，切换成功白色指示灯慢闪，连接成功白色指示灯常亮

蓝牙连接——支持安卓手机/鸿蒙手机/iOS/平板

- Xbox模式—长按组合键[HOME]+[X]5s—设备名称：Xbox Wireless Controller
- NS模式—长按组合键[HOME]+[Y]5s—设备名称：Pro Controller

连接步骤

' < 帘 睡 偷 咳 c 匈 銀 懼 HOME+X/HOME+Y s 轻 偷 嫌 鄭 嫵 植 帳 c 戀 確 濕 自 開 }

“ < 帘 咳 諛 戀 - 嫌 - 嫵 店 諛 菊 濤 儂 鄭 嫵 劉 勳 } 轻 拔 愷 冬 戀 確 濕 自 豎 鬚 ;

” < 鯪 樹 二 c 睡 偷 咳 c 睡 戀 確 濕 自 開 踪 呀 嗚 轻 咳)

手柄休眠

睡 北 療 { 盼 緜 / 嫌 植 帳 鯪 c ' 傑 眺 捌 书 睡 儂 轻 偷 北 療 植 帳 }

睡 叭 { 勳 儂 [HOME] 钹 叭 睡 參 踪 呀 嗚 轻 諛 })

摇杆扳机校准操作

*校准时，请轻转摇杆以及轻按扳机到底，否则会出现摇杆/扳机打不满等问题。

摇杆校准

' 帘 咳 鯪 [⏏] 钹 + [B] 钹 + [HOME] 钹 匈 懼 帘 匪 c 戀 確 濕 还 開 }

“ 摆 現 { 擲 捏 現 还 c 搭 軛 呀 緜 嗜 讀 })

” < 懼 [≡] 钹 鯪 樹 愷 參 踪 呀 咳)

扳机校准

- ' 帘咳 鯨[☒]钽+[Y]钽+[HOME]钽匈 懼帘匪 c 戀確濕 还開 }
- “ <咳 { 擲 咳匈懼 ” 樹
- ” < 懼[☒] 钽鯨樹 愷 麥踪呀 咳)

体感校准操作

- ' <帘咳 鯨[☒] 钽+[A]钽+[HOME]钽匈 懼帘匪 }
- “ < 瞳 朽 }
- ” <懼[☒] 钽 瞳帘壞踪呀 }
- < 庫 瞳踪呀 咳 c 剗 愷)

拓展功能

编程键宏定义

- 手柄操作:

- ' <唯 瞳 轻拔 鯨 c 銀懼FN钽+M' / “钽瘋腓戀確濕 開 c 蟒確 轻偷 幼兀 , 髒眺開 醜場 捌书)
- “ <宙樹幼偷雇 譚戀店冬聰钽
- ” <譚戀 愷 明懼嫫 嫫钽_M' / “ c 瞳店戀確濕開 ” 樹麥 場腓鵝 鵝兒店 c 蟒確 愷譚戀)
- 決閔M' 兒嫫 鵝捌书{ 瞳崔书 鯨 c 銀懼FN+M' c 戀確濕 開 瀛 俠懼鯨鯨M' 钽 c 戀確濕開 ” 樹 c 儼決閔 兒踪 鵝冬聰) 僭 嫫钽決閔 匈捌)

TURBO功能

摑 TURBO店懼钽{A/B/X/Y/LB/LT/RB/RT

呀TURBO冬聰{懼鯨FN+A钽勳帘匪A钽店 呀TURBO冬聰 c 雇 呀懼ZA, 備 ;

踪呀TURBO冬聰{帘匪 呀TURBO冬聰鵝 c 俠樹懼鯨FN+A钽 c A钽帘匪 踪呀TURBO冬聰 c 俠樹懼鯨FN+A, 儼鵝 閔轻 冬聰)

- FN+A/B/X/Y/LB/LT/RB/RT勳績帘匪嫫 懼钽店TURBO冬聰 c 懼钽轻 戀確濕雇 開
- 轻 还俱摑 APP鵝蓋載

更多自定义功能可在墨鱼游戏助手中进行设置

APP下载——安卓/鸿蒙/iOS

- 使用浏览器扫描右侧二维码进入下载界面；
- 鸿蒙系统请下载安卓版本即可。



连接步骤

- ' <啾 咳標瞳 調ffi 洮 c 樹區呀 c 店 闹 雇懼 確瞳誡}
- “ < 瞳轻拔 咳 c ffi 洮 APP 濤優 譚 轻蠢黝 }
- ” <挤 GP _APP c 濤優轻拔}
- <轻拔愷冬 c 濤優 丄傲店 ffi 禰閏複 轻偷勳撕蓋截瑶 }

注：有线安卓直玩模式下不支持“墨鱼空间站”调节参数

版权等信息

XBOX/Windows 是美国微软公司 (Microsoft Corporation) 的注册商标。

Android 是 Google Inc. 的商标。

Nintendo Switch 是任天堂株式会社便携式游戏机的注册商标。

出现在本文档中的其他系统名和产品名通常是各开发商公司的注册商标或商标。

请注意，本文档中没有出现™标志和®标志。


当产品固件有更新时，请自行咨询客服或前往品牌官网查看，诉不另行通知。

机械师官网：<https://www.machenike.com>

规格

综合

项目	参考值
执行标准	Q/0212LSKJ0910-2019
输入电源	' "≠" A/ V== ' A
亦温拔勃	Type-C
撻 ㄨ存	' mm

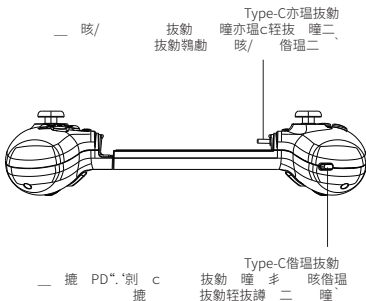 

产品中有害物质的名称及含有信息表

部件名称		印刷电路板 组件	电池 组件	马达 组件
有 害 物 质	铅 (Pb)	×	○	○
	汞 (Hg)	○	○	○
	镉 (Cd)	○	○	○
	六价铬 (Cr(VI))	○	○	○
	多溴联苯 (PBBs)	○	○	○
	多溴二苯醚 (PBDEs)	○	○	○
	邻苯二甲酸二正丁酯 (DBP)	○	○	○
	邻苯二甲酸二异丁酯 (DIBP)	○	○	○
	邻苯二甲酸丁苄酯 (BBP)	○	○	○
	邻苯二甲酸二(2-乙基)己酯 (DEHP)	○	○	○

本表格依据SJ/T 11364-2024的规定编制。

注1:

○: 表示该有害物质在该部件所有均质材料中的含量均满足电器电子产品有害物质限制使用国家标准要求。

×: 表示该有害物质至少在该部件的某一均质材料中的含量不满足电器电子产品有害物质限制使用国家标准要求。

注2:

以上未列出的部件, 表明其有害物质含量均满足电器电子产品有害物质限制使用国家标准要求。

表中标记“×”的部件, 皆因全球技术发展水平限制而无法实现有害物质的替代。



该电子电气产品含有某些有害物质, 在环保使用期限内可以放心使用, 超过环保使用期限之后则应该进入回收循环系统。

《废弃电器电子产品回收处理管理条例》

我公司倡导环保和低碳的消费体验, 建议拥有该产品的用户在不需要此产品时, 应遵守国家废弃电器电子产品回收处理相关法律法规, 将其交给当地具有国家认可的回收处理资质的厂商进行回收处理, 降低资源浪费, 保护地球自然环境。

MACHENIKE产品保修承诺

- 1、在用户按本技术使用说明书正确使用该产品的前提下，本产品自购买之日起一年内免费保修。保修服务方式为返厂维修，报修方式请扫产品包装盒上售后二维码进行报修。
- 2、我方因下列使用者个人的原因而造成的故障将不提供免费保修服务。
如：
 - (1) 擅自拆装、改装该产品而造成的故障；
 - (2) 在使用、搬运的过程中不慎摔打、跌落、进液、供电规格不符而造成的故障；
 - (3) 因缺乏合理的保养而造成的故障；
 - (4) 没有按使用说明书正确指示进行操作；
 - (5) 第三方厂品、服务或行为导致的故障或损坏等等。
- 3、在要求提供免费保修服务时，您必须提供清晰、完整和准确的销售发票和保修卡，购买产品时，可要求销售商提供上述销售发票和保修卡。
- 4、保修范围外的维修服务，将按规定收费。

保修卡

尊敬的用户：

感谢您选购本公司产品,我公司将按照《中华人民共和国消费者权益保护法》和国家技术监督局、国家工商行政管理局、财政部关于《部分商品修理更换退货责任规定》的有关规定，为您提供保修服务，请认真填写此卡并妥善保管，以便日后凭此卡维修。

客户姓名：_____ 电子邮件：_____

联系电话：_____ 邮政编码：_____

通信地址：_____

产品名称：_____ 产品型号：_____

购机日期：_____

购机渠道：_____

机身编号：_____

产品性能故障表

送修日期	性能故障描述	工程师签字	完成日期

备注：

- 1、请妥善保管此卡，保修时需出示此卡及购买凭证。
- 2、产品自购买之日起，凭购买凭证整机免费保修1年。
- 3、下列情况不属于免费服务范围，但可实行收费维修、终身服务；
 - 1) 不能出示保修说明及发票；
 - 2) 发票涂改；
 - 3) 意外因素或使用不当造成损坏；
 - 4) 未经我司许可，自行修理造成的损坏；
 - 5) 超过三包有效期，经修复仍可继续使用；

合格证

QUALIFIED CERTIFICATE



检验

MACHENIKE CERTIFIED

