



MACHENIKE

M-GAME

MACHENIKE GAMEPAD GP5



USER MANUAL 使用说明书

 
WARRANTY CARD 保修卡

Read manual before use. Keep for reference

使用本产品前请仔细阅读说明书，妥善保存以备参考

PACKING CONTENTS

Please check and confirm the accessories



1 x Controller



1 x User Manual, Certificate Of Compliance

BUTTON LAYOUT

Bumper LB (L1)

Left Joystick
(Works as L3
when pressed)

Indicator

BACK

FN

Bumper RB(R1)

START

Charging Port

Right Joystick
(Works as L3
when pressed)

HOME

Trigger RT
R2

 
M2

Trigger LT
L2

M1

CONNECTION

Connect the mobile phone/tablet to the controller by following the steps below. The controller will automatically connect and power on.

Align the Type-C port with the phone.	
Extend the controller and place the phone inside.	
Release the controller to complete the connection.	

Note: For iOS devices with a Type-C interface, Bluetooth pairing is required after connection.

The maximum stretch size of the controller is 176mm.

COMPATIBILITY

Wired Connection - Supports Android/HarmonyOS phones.

- With wired connection, you can switch modes via the "MoYu Gaming Assistant" app to adapt to different games.

Wired HID Mode

This mode offers the best compatibility with original Android controller games, and it's recommended for original games by default.

Wired Android Direct Play Mode

This mode is primarily used for phone games that don't support original controllers. Initial key mapping requires the use of an app. Once key mapping is completed, the app doesn't need to be opened in the next time.

NS Mode

Supports Switch consoles and emulators.

Xbox Mode

Supports games that originally support controllers, streaming, and emulators, with original vibration mode.

Connection Steps:

1. Extend the controller and place the phone inside. The controller will automatically recognize the wired HID mode by default. The indicator light will flash slowly in white during connection and remain solid white when the connection is successful.

Note: In any Bluetooth mode, you can switch to the wired HID mode by long-pressing the combination keys HOME + A. When successfully switched, the white indicator light will flash slowly, and it will remain solid white when the connection is successful.

Bluetooth Connection - Supports Android phones/HarmonyOS phones/iOS/Tablets

- **Xbox Mode** - Long press the combination keys [HOME] + [X] for 5 seconds - Device Name: Xbox Wireless Controller.
- **NS Mode** - Long press the combination keys [HOME] + [Y] for 5 seconds - Device Name: Pro Controller.

Connection Steps:

1. Extend the controller and place the phone inside, while simultaneously long-pressing HOME + X / HOME + Y for 5 seconds to enter Bluetooth pairing mode. The indicator light will flash quickly in blue.
2. Open the phone settings - Bluetooth - Find the corresponding device name and click to pair. The indicator light will remain solid blue when the connection is successful.
3. For subsequent use, place the controller in the phone, and the controller indicator light will flash slowly in blue and automatically reconnect to the phone.

SLEEP MODE

Sleep Mode: In both wired and Bluetooth modes, the controller will enter sleep mode if left inactive for 15 minutes.

Controller Wake-up: You can wake up the controller and automatically reconnect to the device by clicking the [HOME] button.

JOYSTICK AND TRIGGER CALIBRATION

*During calibration, gently rotate the joystick and lightly press the trigger to its fullest extent to avoid issues such as incomplete joystick/trigger detection.

Joystick Calibration:

1. Press [] + [B] + [HOME] simultaneously while in power-on state to initiate calibration. The indicator light will rapidly blink during calibration.
2. Joystick Calibration: Move the joystick slowly to its full extent in all directions, completing at least three full rotations.
3. Finally, press [] once to complete the calibration and automatically power off.

Joystick Calibration:

1. Press [] + [Y] + [HOME] simultaneously while in power-on state to initiate calibration. The indicator light will rapidly blink during calibration.
2. Trigger Calibration: Press each trigger fully three times.
3. Finally, press [] once to complete the calibration and automatically power off.

MOTION SENSING CALIBRATION

1. Simultaneously press the [] button + [A] button + [HOME] button to activate the calibration function.
2. Place the controller flat on the table.
3. Press the [] button to initiate automatic calibration.
4. Wait for the controller to automatically power off. This indicates that the calibration process has been completed.

ADVANCED FUNCTIONALITY

Programming Buttons Macros

• Controller Operation:

1. With the controller already connected, simultaneously press the FN + M1/M2 key until the indicator light continuously flashes, indicating that you've entered the recording mode. If it doesn't flash, please repeat this operation.
2. Sequentially input the function keys you want to set.
3. After setting is completed, press the corresponding macro key (M1/M2). The LOGO light will flash three times and return to the previous mode.

Clearing the current M1 macro:

While the controller is in working status, press FN + M1. The LOGO light will flash, and then press the M1 key once more. The LOGO light will flash three times, clearing the current macro. The same steps apply to clearing other macro keys.

TURBO Function

Supported TURBO buttons: A/B/X/Y/LB/LT/RB/RT

Manual Turbo Function: Pressing FN + A enables manual turbo function for the A key. You need to manually hold down A to trigger it.

Automatic Turbo Function: After activating the manual turbo function, press FN + A again to enable automatic turbo function for the A key. Pressing FN + A again will disable the rapid-fire function.

- FN + A/B/X/Y/LB/LT/RB/RT can enable the corresponding turbo function for the keys. The indicator light will flash along with the key when rapid-fire is activated.
- The rapid-fire rate can be adjusted in the app.

Additional customization features can be set in the "MoYu Gaming" Assistant:

APP Download for Android/HarmonyOS/iOS

1. Scan the QR code on the right using your browser to access the download page.
2. For HarmonyOS, please download the Android version of the app.



Connection Steps:

Connection Steps:

1. After correctly installing the MoYu Gaming Assistant on your phone, when you first launch it, you'll be prompted to confirm related permissions as per instructions.
2. Connect the controller to your phone, then scan and add the device through the "MoYu Gaming Assistant" app.
3. Once you've found "GP5_APP", click to connect.
4. After successful connection, navigate to the "MoYu Station" within the app to access the parameter adjustment interface.

Note: Parameter adjustment via the "MoYu Space Station" is not supported in the wired Android Direct Play mode.

Copyright Information

PlayStation is a registered trademark of Sony Interactive Entertainment (SIE).

XBOX/Windows is a registered trademark of Microsoft Corporation.

Android is a trademark of Google Inc.

Nintendo Switch is a registered trademark of Nintendo Co.

MacOS is a registered trademark of Apple Inc. in the United States or other countries.

Other system and product names that appear in this document are generally registered trademarks or trademarks of the respective developer companies. Please note that the ™ logo and ® logos do not appear in this document.

Please consult customer service or the brand's website for updates to the product firmware without notice.


Machenike Official Website: <https://global.machenike.com/>

SPECIFICATIONS

ITEM	Value
Input Power	12V $\equiv$ 3A/ 5V $\equiv$ 1A
Power Interface	Type-C
Maximum Stretch Size	176mm

Type-C Power Interface

 (This interface is used for powering the controller from the mobile phone/tablet)

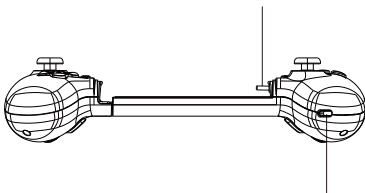


Type-C Charging Interface

(Only supports PD2.0 protocol. This interface allows the controller to charge the mobile phone while the power interface is connected to the mobile phone. Additionally, it does not support operating devices through this interface.)

产品清单

 请检查并确认附件



1 x 手柄



1 x 使用说明书、保修卡、合格证

按键布局

肩键LB (L1)

左摇杆
下压为L3

指示灯

BACK键

FN键

肩键RB(R1)

START键

供电接口

右摇杆
下压为R3

HOME键

霍尔扳机RT
(R2)

 
 
 
M2

霍尔扳机LT
(L2)

M1

基本连接说明

按以下步骤将手机/平板与手柄连接，手柄会自动连接并开机

对齐Type-C插口连接手机	
拉开手柄并放入手机	
合起手柄完成连接	

备注：Type-C接口的iOS设备连接之后还需进行蓝牙配对，才可使用。
手柄最大拉伸尺寸176mm

关于兼容性

有线连接——支持安卓手机/鸿蒙手机

- 有线连接下，可通过手机APP-墨鱼游戏助手切换模式，以适配不同的游戏。

有线HID模式

该模式安卓原生手柄游戏兼容性最好，原生游戏默认推荐使用此模式。

有线安卓直玩模式

该模式主要应用于不支持原生手柄的手机游戏,初次键位映射需要搭配APP使用，按键映射完成后第二次进入游戏可不需要打开APP使用。

NS模式

支持Switch主机、模拟器。

Xbox模式

适用于原生支持手柄的游戏，串流，模拟器，支持原生震动。

连接步骤

1、拉开手柄放入手机，手柄自动默认识别有线HID模式；指示灯白色慢闪，连接成功指示灯白色常亮。

备注：任意蓝牙模式下，可通过长按组合键HOME+A切换到有线HID模式，切换成功白色指示灯慢闪，连接成功白色指示灯常亮

蓝牙连接——支持安卓手机/鸿蒙手机/iOS/平板

- **Xbox模式**—长按组合键[HOME]+[X]5s—设备名称：Xbox Wireless Controller
- **NS模式**—长按组合键[HOME]+[Y]5s—设备名称：Pro Controller

连接步骤

- 1、拉开手柄放入手机，同时长按HOME+X/HOME+Y 5s进入蓝牙配对模式，指示灯蓝色快闪；
- 2、打开手机设置-蓝牙-找到对应的设备名称点击配对即可；连接成功指示灯蓝色常亮；
- 3、下次使用，手柄放入手机，手柄指示灯蓝色慢闪自动回连手机。

手柄休眠

手柄休眠：有线/蓝牙模式下，15分钟未操作手柄则进入休眠模式。

手柄唤醒：可通过单击[HOME]键唤醒手柄并自动回连设备。

摇杆扳机校准操作

*校准时，请轻转摇杆以及轻按扳机到底，否则会出现摇杆/扳机打不满等问题。

摇杆校准

- 1.开机状态下[]键+[B]键+[HOME]键同时按开启校准，校准时指示灯快速闪烁；
- 2.摇杆校准：左右摇杆慢速打满，完整转动三圈以上；
- 3.最后按[]键一次完成校准并自动关机。

扳机校准

- 1、开机状态下[🎮]键+[Y]键+[HOME]键同时按开启校准，校准时指示灯快速闪烁；
- 2、扳机校准：左右扳机各按到底3次
- 3、最后按[≡]键一次完成校准并自动关机。

体感校准操作

- 1、开机状态下[🎮]键+[A]键+[HOME]键同时按开启校准；
- 2、将手柄平放于桌面；
- 3、按[≡]键手柄开始自动校准；
- 4、等待手柄自动关机，即校准完成。

拓展功能

编程键宏定义

- 手柄操作：
 - 1、在手柄已连接状态下，长按FN键+M1/2键直至指示灯慢闪，表示已进入录制状态，若未闪烁请重复此操作。
 - 2、依次录入需要设置的功能键
 - 3、设置完成后短按对应宏键（M1/2），手柄的指示灯闪烁3次并恢复至之前的状态，表示完成设置。

清除M1当前宏定义操作：手柄工作状态下，长按FN+M1，指示灯慢闪然后再按一下M1键，指示灯闪烁3次，则清除当前自定义功能。其他宏键清除步骤同理。

TURBO功能

支持TURBO的按键：A/B/X/Y/LB/LT/RB/RT

手动TURBO功能：按下FN+A键可开启A键的手动TURBO功能，需要手动按住A，才会触发；

自动TURBO功能：开启手动TURBO功能之后，再次按下FN+A键，此时A键开启自动TURBO功能，再次按下FN+A，则为关闭连发功能。

- FN+A/B/X/Y/LB/LT/RB/RT可以开启对应按键的TURBO功能，按键连发时指示灯跟随闪烁
- 连发速率支持APP中调节

更多自定义功能可在墨鱼游戏助手中进行设置

APP下载——安卓/鸿蒙/iOS

- 使用浏览器扫描右侧二维码进入下载界面；
- 鸿蒙系统请下载安卓版本即可。



连接步骤

- 1、在手机正确安装墨鱼游戏助手后，首次启动时，弹出的相关权限申请需按提示确认；
- 2、手柄连接手机，通过“墨鱼游戏助手APP”点击添加设备进行扫描；
- 3、搜索到“GP5_APP”，点击连接；
- 4、连接成功后，点击软件内的“墨鱼空间站”进入参数调节界面；

注：有线安卓直玩模式下不支持“墨鱼空间站”调节参数

版权等信息

XBOX/Windows 是美国微软公司 (Microsoft Corporation) 的注册商标。

Android 是 Google Inc. 的商标。

Nintendo Switch 是任天堂株式会社便携式游戏机的注册商标。

出现在本文档中的其他系统名和产品名通常是各开发商公司的注册商标或商标。

请注意，本文档中没有出现™标志和®标志。

当产品固件有更新时，请自行咨询客服或前往品牌官网查看，诉不另行通知。


机械师官网：<https://www.machenike.com>

规格

综合

项目	参考值
执行标准	Q/0212LSKJ0910-2019
输入电源	12V $\equiv$ 3A/ 5V $\equiv$ 1A
供电接口	Type-C
最大支拉伸尺寸	176mm

 Type-C供电接口
(手机/平板通过此接口给手柄供电, 连接手柄使用
此接口也可给手机/平板充电使用)

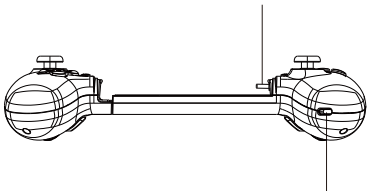

Type-C充电接口
(仅支持PD2.0协议, 通过此接口手柄透传给手机充电
不支持通过此接口连接设备使用手柄)

MACHENIKE产品保修承诺

- 1、在用户按本技术使用说明书正确使用该产品的前提下，本产品自购买之日起一年内免费保修。保修服务方式为返厂维修，报修方式请扫产品包装盒上售后二维码进行报修。
- 2、我方因下列使用者个人的原因而造成的故障将不提供免费保修服务。
如：
 - (1) 擅自拆装、改装该产品而造成的故障；
 - (2) 在使用、搬运的过程中不慎摔打、跌落、进液、供电规格不符而造成的故障；
 - (3) 因缺乏合理的保养而造成的故障；
 - (4) 没有按使用说明书正确指示进行操作；
 - (5) 第三方厂品、服务或行为导致的故障或损坏等等。
- 3、在要求提供免费保修服务时，您必须提供清晰、完整和准确的销售发票和保修卡，购买产品时，可要求销售商提供上述销售发票和保修卡。
- 4、保修范围外的维修服务，将按规定收费。

保修卡

尊敬的用户：

感谢您选购本公司产品,我公司将按照《中华人民共和国消费者权益保护法》和国家技术监督局、国家工商行政管理局、财政部关于《部分商品修理更换退货责任规定》的有关规定，为您提供保修服务，请认真填写此卡并妥善保管，以便日后凭此卡维修。

客户姓名：_____ 电子邮件：_____
联系电话：_____ 邮政编码：_____
通信地址：_____
产品名称：_____ 产品型号：_____
购机日期：_____
购机渠道：_____
机身编号：_____

产品性能故障表

送修日期	性能故障描述	工程师签字	完成日期

备注：

- 1、请妥善保管此卡，保修时需出示此卡及购买凭证。
- 2、产品自购买之日起，凭购买凭证整机免费保修1年。
- 3、下列情况不属于免费服务范围，但可实行收费维修、终身服务；
 - 1) 不能出示保修说明及发票；
 - 2) 发票涂改；
 - 3) 意外因素或使用不当造成损坏；
 - 4) 未经我司许可，自行修理造成的损坏；
 - 5) 超过三包有效期，经修复仍可继续使用；

合格证

QUALIFIED CERTIFICATE



检验

MACHENIKE CERTIFIED

